


## FEDER-FÜHRUNGSBOLZEN

Artikel-Nr.: 1756.D.I

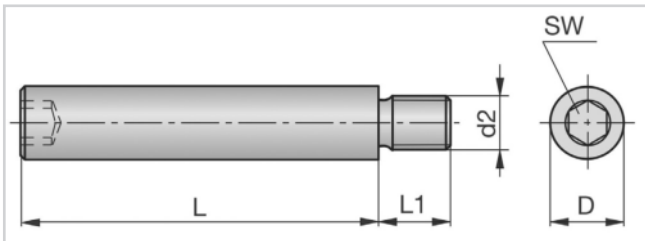

D	6	8	10	13	16	20	25
d <sub>2</sub>	M4	M6	M8	M10	M12	M16	M20
L1	6	9	15	15	18	25	30
SW	3	4	5	6	8	10	14
L							
20	•	•	•				
25	•	•	•				
32	•	•	•	•	•		
40	•	•	•	•	•		
50		•	•	•	•	•	•
63			•	•	•	•	•
80				•	•	•	•
95				•	•	•	•
118					•	•	•
140					•	•	•
180					•	•	•


Bestellbeispiel: d = 8, l = 40  
1756.08.040

## SCHEIBE FÜR SCHRAUBEN M6 – M36

Artikel-Nr.: 4122.d<sub>1</sub>.d<sub>2</sub>.s



Bestellbeispiel: d<sub>1</sub> = 17, d<sub>2</sub> = 35, s = 4  
4122.170.35.04

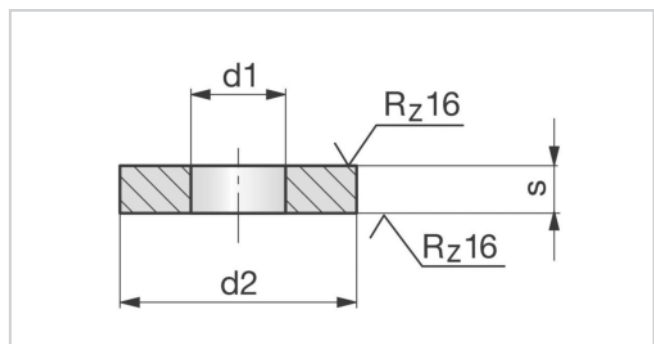

d <sub>1</sub>	6,4	8,4	8,4	8,5	9	10,5	10,5	10,5	10,5	11	12,5	13	13	13	13,4	16,4	17	17	17	17
d <sub>2</sub>	17	17	23	20	26	25	25	26	28	36	28	30	30	46	23	26	35	35	36	36
s	3	3	4	4	4	4	5	4	4	6	4	5	6	8	4	4	4	6	4	13
d <sub>1</sub>	17	17	17	17	20,4	21	21	21	21	21	21	22	25	25	25	26	26	31	37	
d <sub>2</sub>	37	38	40	58	30	42	44	45	45	46	49	68	46	55	56	58	80	68	80	
s	6	6	6	10	5	8	8	8	16	6	6	12	10	10	10	6	12	8	8	